

## **AccuVote-OS Closing Quick Reference Guide**

- 1 Unlock and open the ballot box side compartment door.
- 2 Remove all ballots and feed them into the OS unit.
- Unlock and open the printer cover.

Unroll the zero report and place the printer cover under the report.









5 Unlock the retaining door.

- Feed the ender card into the OS unit while depressing the YES and NO buttons simultaneously.
- The elections total report will print automatically. The designated poll workers will need to sign the report.
- When you see the message "NEED ANOTHER COPY?"
  Press NO and tear off the copy.









- 9 Break the security seal. Lift the metal bar and remove the memory card.
- Place the memory card and all reports in the envelope.
- Power the unit off by flipping the red power switch.
- Replace the printer cover. Unlock the retaining door. Slide the OS unit out of the ballot box.









- Disconnect the power cord from the back of the OS unit and the power outlet.
- Place the OS unit back into it's carrying case along with the power cord and keys.
- Remove all ballots from the back of the ballot box. Place them in the designated container.
- Replace the security plate and lock it into place. Relock the retaining door.







